

Every

Wearable muscles.


Make life lighter



MAXIMUM
-25.5kgf
100Nm

Image of Power Support

Image of Power Support



Innophys Co., Ltd. 3rd Fl., Morito Memorial Hall,
Tokyo University of Science 4-2-2 Kagurazaka, Shinjuku-ku, Tokyo, Japan



Every

Make life lighter.
 From lightening the load on your back at work to helping with daily labor-intensive activities.
 Light, simple, and powerful.
 Muscle Suit Every is an assistive suit to help all people live healthy lifestyles.




Features

powerful



Strong support
 Assists movements with up to 25.5 kgf of auxiliary force.

eco-friendly

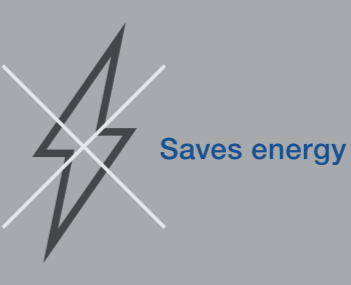

Saves energy
 No need for electricity!
 It works with air pressure for an unlimited amount of time.

lightweight



Wearable
 Product weight of 3.8 kg

simple



Easy to wear
 Put it on in 10 seconds.
 No expert skills are required.

good value




Reasonably priced
 Made possible for families to purchase.

water & dust proof



Protection
 Jobs outdoors or with water are no problem.

Use it at home, at work, or in a variety of situations

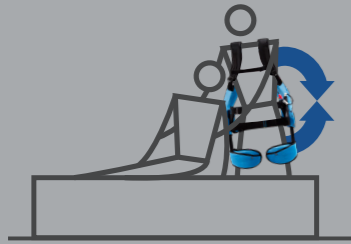


Nursing care support



Farming



Shoveling snow or other labor-intensive jobs

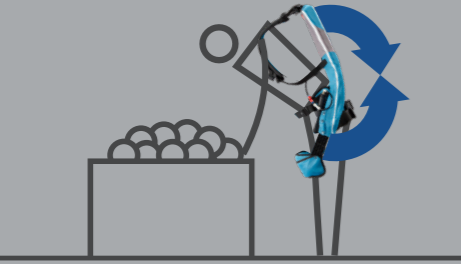

Maintaining uncomfortable positions



Carrying heavy loads

Types	Soft fit / Tight fit
Sizes:based on height (recommended)	Small / Medium:150 -165 cm, Medium / Large:160 -185 cm
Product weight	3.8 kg *Not including cover
Driving force	Compressed air
Actuator	McKibben artificial muscle
Compressed air supply method	Manual air pump
Assistive force	25.5kgf(100Nm)
Operating temperature	-30°C~50°C
Dustproof / Waterproof performance (protection rating)	IP56
Product dimensions:H x W x D	Small / Medium:805mm/465mm/170mm Medium / Large:840mm/465mm/170mm
Manufacturer's warranty period	Six months /extended to one year if product registration is completed within one month of purchase