


Effortlessly, towards lightness.




Soft-Light

Powered by **MEDIAID**

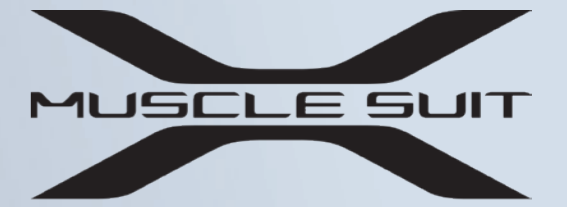

make life lighter

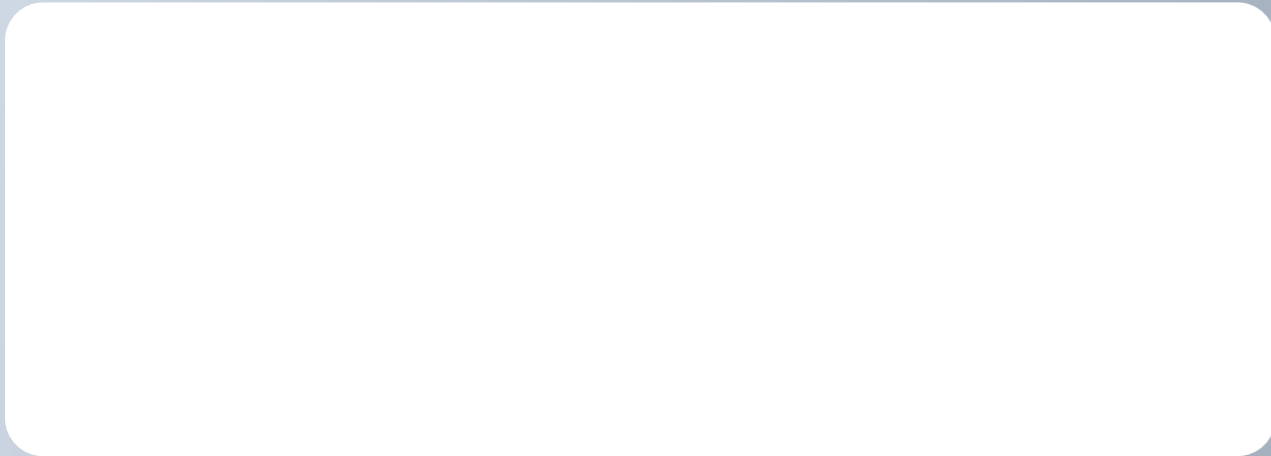


MUSCLE SUIT

Soft-Light

Effortlessly supporting work

The functionality of the Muscle Suit made more accessible with the Muscle Suit Soft-Light, which can be worn like clothing. By providing comfortable support to the waist, it reduces the strain of various tasks such as lifting and carrying heavy objects or working in a stooped posture. Furthermore, it prioritizes everyday comfort with its lightweight design, excellent breathability, and ease of wearing, adjusting, and maintenance, without hindering movements during work.

For various types of work

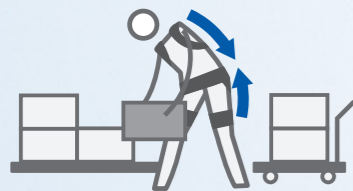

For lifting and carrying tasks in manufacturing and logistics warehouses



For maintaining uncomfortable postures in the care giving field



For forward-leaning postures in agricultural work

Size

Parts name	Size	Scope of Application	Parts name	Size	Scope of Application
Upper part	S	(Height) 155-165cm	Lower part	S	(Waist Size) 65-75cm
	M	(Height) 165-175cm		M	(Waist Size) 75-85cm
	L	(Height) 175-185cm		L	(Waist Size) 85-95cm

•Please choose the upper part according to your height and the lower part according to your waist size. (Depending on your body shape, the sizes for the upper and lower parts may be different.)

•Measure your waist size based on the position of your navel. If the measurement falls between two sizes, choose the larger size.

•The size for the lower part is measured based on your nude dimensions. Since it is worn over pants and a belt, please choose a size that is 3-5cm larger than your normal size.

Supporting a forward-leaning posture

By connecting the upper and lower parts around the waist, tension is applied from the shoulders and thighs towards the lower back, reducing the burden on the lower back in a forward-leaning posture.



Supporting a working posture

The increase in intra-abdominal pressure from the waist belt stabilizes the lower back, reducing the burden from prolonged static posture.



supporting a lifted posture

The moderate elasticity of the thigh belt and cross tape reduces the burden on the lower back when lifting and lowering loads.



Moderate fit

The design is based on the human body structure and each part has a moderate elasticity, which supports working posture without hindering movement.

Excellent breathability

The back and waist panels, as well as the thigh belt, are made of breathable mesh material, ensuring comfort even during prolonged wear.



Easy to adjust

By adjusting the tightness of the belt and straps, you can quickly relax during break times.



Lightweight design

With a total weight of approximately 460g (size L) for the upper and lower parts combined, the lightweight design reduces the burden when worn.